

3 STEP PROCEDURES


Triad Flooring

PANEL INSTALLATION

TOOLS THAT MAY BE NEEDED:

- 5/16" (5mm) Hex Key
- Hammer
- Drift Punch
- 7/32" (10mm) Socket


- 01** Loosen set screw slightly, adjust to length need and re-tighten

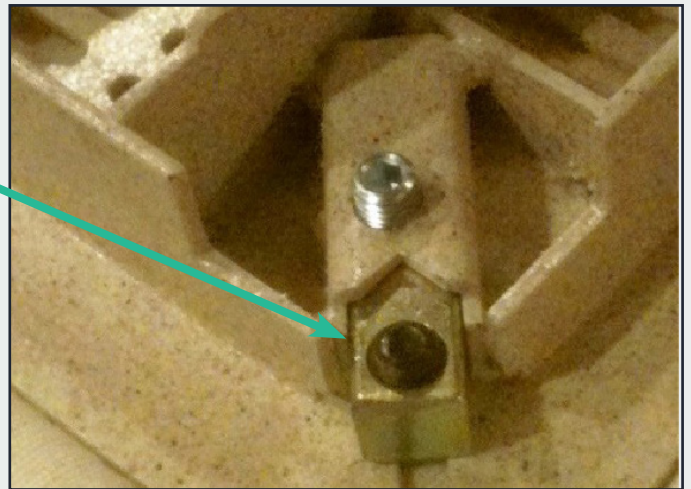

- 02** Insert Allen wrench on bottom of leveling screw and tap telescoping arm to length needed to fit onto pedestal head or stringer. (Re-tighten Set Screw to lock into position.)



03 Turn panel over and adjust leveling screw so panel top surface is flush with adjacent panel.

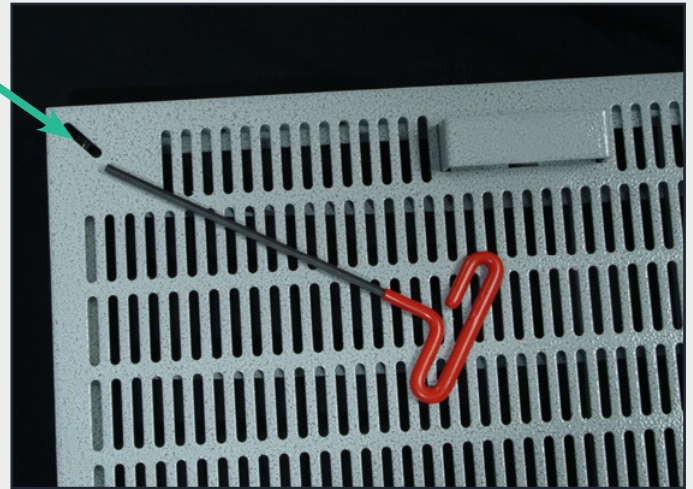

NEED ADDITIONAL ASSISTANCE, CUSTOMER SERVICE 800.518.1519

For installations that require Actuating Frame Leveler to be FULLY EXTENDED, additional pedestal support should be added at corners locations as shown. Concentrated load rating decreases when Actuating Frame Leveler FULLY EXTENDED.